

Vuggemotor

BRUGERMANUAL

TILLYKKE MED DIN NYE VUGGEMOTOR!

Vuggemotorens formål er at vugge en slyngevugge i en op- og nedadgående bevægelse og bør kun bruges til dette formål.

Læs denne manual grundigt før vuggemotoren anvendes.


Stykliste



Vuggemotor med to karabinhager i rustfrit stål





Strømforsyning til power banker

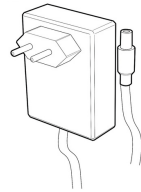

Strømforsyning

Installations Guide

- Hæng vuggemotoren på en krog, stativ eller karmbeslag
- Nu skal du hænge din fjeder på vuggemotorens nederste karabinhage. Den nederste karabinhage er belagt med gummi.
- Den trekantede karabinhage som er monteret på slyngevuggen skal monteres på fjederen. Den trekantede karabinhage er gummibelagt.
- Nu skal du trække metalringen ned fra motoren og placere den inde i den trekantede karabinhage. Det er vigtigt at skrue karabinhagen fast igen efter, at du har skruet den løs for at kunne montere metalringen. Bemærk, at trækkesnoren afbildet til højre er monteret på et stykke stof.
- Strømforsyningen tilsluttes. Sørg for at strømforsyningsledningen ikke er snublefare.
- Du kan nu bruge vuggemotoren. Læs venligst nedenstående instruktioner.

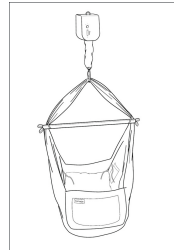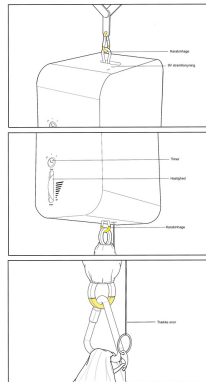

Stadig i tvivl, så scan denne video guide, hvor vi viser hvordan du opsætter vuggemotoren



Instruktioner

Justeringshjul (hastighedsjustering og start knap)

For at få vuggemotoren til at starte, så skal hjulet ruller på indtil der høres en "klik" lyd. Vuggemotoren vil nu være tændt og virke. Jo mere du ruller hjulet opad, jo hurtigere vil vuggemotoren vugge slyngevuggen. Jo mere du ruller hjulet ned, så langsommere vil slyngevuggen blive vugget. Når der høres et "klik" i forbindelse med at hjulet ruller ned, vil vuggemotoren slukke.

OBS: for at få slyngevuggen til at svinge når man har tændt motoren, skal fjederen eller slyngevuggen have et lille skub i nedadgående retning.

Tidsindstillingsknap

I standardtilstanden, hvor tidsindstillingsknappen ikke er trykket ned, vil vuggemotoren vugge kontinuerligt.

Tryk én gang på knappen og vuggemotoren vil vugge i 30 minutter (med et lys tændt).

Tryk to gange på knappen og vuggemotoren vil vugge i 1 time (med et lys tændt).

Tryk tre gange på knappen og vuggemotoren vil vugge i 2 timer (med tre lys tændt)

Tryk fire gange og den vende tilbage til standardtilstanden for at vugge kontinuerligt (med alle lys slukket)

Når tiden er gået, stopper vuggemotoren med at virke, og indikatorlyset vil hele tiden være slukket, og logolyset vil blinke. For at begynde at tænde vuggemotoren igen, tryk venligst på knappen igen og træk lidt i fjederen nedad.

Sikkerhedsinstruktioner

Inden vuggemotoren tages i brug, læs sikkerhedsinstruktionerne grundigt.

Udvis den største omhu ved håndtering af vuggemotoren for at sikre størst mulig sikkerhed for dit barn.

Hvis vuggemotoren er monteret forkert, kan det forårsage materiel skade eller personskade, herunder tab af liv eller lemmer.



- Dette produkt er kun udviklet til slyngevugger og ikke andre formål.
- Maksimal belastning på 15 kg.
- Produktet skal installeres som beskrevet i denne vejledning. Brug ikke vuggemotoren til andre formål.
- Inden babyen lægges i slyngevuggen, skal du sikre dig at vuggemotoren er slukket.
- Når vuggemotoren anvendes brug drejknappen til at sikre dig den rette hastighed.
- Sluk altid vuggemotoren, før du tager din baby op af slyngevuggen.
- Sørg for, at ledningen til strømforsyningen ikke hænger frit, så den ikke kan blive fanget i noget, når vuggemotoren bevæger sig.
- Vuggemotoren skal ikke anvendes til andre formål end beskrevet i denne vejledning.
- Brug ikke vuggemotoren, hvis din baby kan sidde, knæle eller trække sig selv op.
- Mindre børn bør ikke lege i nærheden af vuggemotoren uden opsyn.
- Brug ikke vuggemotoren, hvis der er tegn på beskadigelse eller defekter.
- Skub ikke vuggen manuelt, mens wiren er fastgjort til slyngevuggen.
- Monter kun vuggemotoren i originale dele.
- Kontroller altid at karabinhagerne ikke er beskadiget og at de sidder korrekt fast på krog og fjederen.
- Du skal sikre dig, at slyngevuggen aldrig har kontakt med gulvet. Der skal være minimum 5 cm fra bunden af slyngevuggen til gulvet.
- Vuggemotoren er testet til at fungere med bamocks stativ og kambeslag samt tilhørende produkter. Anvendes vuggemotoren med et stativ eller karmbeslag af anden producent, kan vi ikke garantere, at vuggemotoren kan monteres ordentligt eller vil fungere korrekt.
- Brug kun det originale strømstik, ikke certificerede eller uoriginale strømstik kan forårsage elektrisk stød, brand, eksplosion og andre farer.
- Brug venligst ikke nogen anden strømkilde end den 9V strømadapter der medfølger.
- Forsøg ikke selv at adskille eller reparere vuggemotoren, da det kan forårsage skade på vuggemotoren og tab af garanti.
- Af sikkerhedsmæssige årsager og tilladelse må produktet ikke genopbygges eller modificeres på nogen måde.
- Andre formål med dette produkt end dem, der er nævnt ovenfor, kan forårsage skade på ejendom eller personskade.
- Efterlad aldrig din baby uden opsyn, og forbliv altid i nærheden, når vuggemotoren kører.
- Risiko for elektrisk stød. Hænderne skal være tørre og rene, før du rører ved strømforsyningen, stikket og kablet. Undgå at bøje, sno eller træde på kabler for at undgå brud, især ved kablets input- og output-ender.

Vedligeholdelses og rengøringsinstruktioner

- Spray eller rengør ikke overfladen med ætsende væsker. Til støvrengensning skal du tørre forsigtigt af med en let blød klud med rent vand.
- Vuggemotoren er ikke vandtæt, den kan ikke vaskes med vand eller placeres på et fugtigt eller regnfuldt sted.
- Udsæt ikke vuggemotoren og dens tilbehør for solen for at undgå ulykker såsom overophedning, forbrænding og eksplosion.
- Placer ikke vuggemotoren og dens tilbehør i miljøer med høje temperaturer eller i højtryksudstyr, såsom mikrobølgeovne eller ovne. Ellers kan det forårsage skader, brand eller andre ulykker.
- At lirke vuggemotoren med værktøj kan beskadige eller ridse den.
- Brug kun vuggemotoren indendørs.
- Hold vuggemotoren og dens tilbehør væk fra børns rækkevidde.

Bortskaffelse

Produktet er underlagt det europæiske direktiv 96/2002/EC;



Bortskaf aldrig produktet sammen med andet husholdningsaffald. Sørg for at kende de lokale regler om separat indsamling af elektriske og elektroniske produkter.



Hammock motor

USER MANUAL

CONGRATULATIONS ON YOUR NEW HAMMOCK MOTOR!

This hammock motor is only used to rock a baby hammock in an upward and downward motion and not other purposes.

Read this manual carefully before using the hammock motor.


Package list



Hammock motor with two mounted carabiners in stainless steel




Power plug to power banker

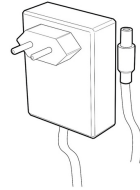

Power plug

Installation guide

- 01 Hang the hammock motor on a hook, stand or door clamp.
- 02 Hang the spring on the bottom carabiner. Be careful when mounting the spring on the carabiner, as the sharp edge of the carabiner can damage the rubber coating.
- 03 The triangle carabiner mounted on the hammock must be mounted on the spring.
- 04 The triangle carabiner mounted on the hammock must be mounted on the spring.
- 05 Now hook the metaling of the pull cord into the triangle carabiner
- 06 Plug in the power supply on top of the hammock motor. Make sure that the power supply wire is used neatly and is not a trip hazard. You can now use the hammock motor. Please read the functions below.

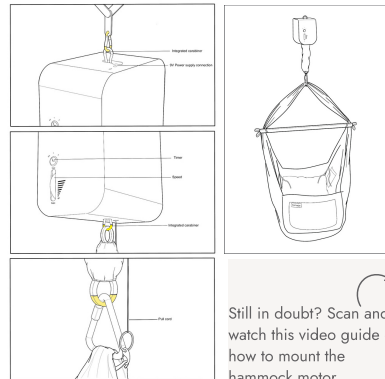

Functions

Adjustment wheel (speed adjustment and start button)

Scroll the wheel up until a "click" sound is heard; the hammock motor will start working. The more you scroll upwards, the **faster the shaking speed will be. The more you scroll downwards, the slower the shaking speed will be. When a "click" sound** is heard in the progress of scrolling down, the hammock motor will be turned off

When the hammock motor is turned on give the spring or hammock a push downwards and it will swing.

Time setting button

In the default state where the button is unpressed, the hammock motor will work continuously.

Press the button one time, the hammock motor will work for 30 minutes (with one light on).

Press the button two times, the hammock motor will work for 1 hour (with two lights on).

Press the button three times, the hammock motor will work for 2 hours (with three lights on)

Press the button four times, the hammock motor will return to the default state of working continuously (with all the lights off)

When the time is up, the machine will stop working, all the time indicator lights will be off, and the logo light will blink.

To start working again, please press the button again and shake the hammock motor downwards

Safety instructions

Before using the hammock motor, read the safety instructions carefully. Please read and adhere to all warnings and instructions related to our product carefully. Please exercise the utmost care in handling the baby hammock motor to ensure the greatest possible safety for your child. If the hammock motor is assembled incorrectly, it can cause material damage or personal injury, including loss of life or limb.



- This product is used for a baby hammock only, not for other purposes.
- The maximum load-bearing of this product is 15 kg.
- This product must be installed in line with the "Installation Guidance". Improper installation may cause an accidental fall.
- Before putting the baby into the hammock, please ensure that the hammock motor is turned off.
- The product must be used within the sight of adults or people with enough safety-consciousness.
- When starting the hammock motor, please scroll the wheel upwards slowly to adjust the speed, and pull the hammock motor cloth down slightly to help the hammock motor start.
- Always switch off the hammock motor before picking up your baby from the hammock.
- Make sure that the cord to the power supply does not hang freely so that it cannot get caught in anything when the hammock motor is running.
- The hammock motor should not be used for any other purpose than described in this guide.
- Do not use the hammock motor if your baby can sit, kneel, or pull itself up.
- Smaller children should not play near the hammock motor unattended.
- Do not use the hammock motor if there are any signs of damage or defects.
- Only mount the hammock motor in original parts. Always check that the carabiners are not damaged, and they are properly attached to the hook and the spring.
- You must make sure that the hammock never contacts the floor. There must be a minimum of 5 cm from the bottom of the hammock to the floor.
- The hammock motor has been tested to work with the Bamocks hammock stand and door frame clamp, as well as associated products. If the hammock motor is used with a stand or door frame clamp from another manufacturer, we cannot guarantee that the hammock motor will work properly.
- Please unplug the power cord after use.
- Do not attempt to disassemble or repair the hammock motor by yourself, as this may cause permanent damage and loss of warranty.
- Never leave your baby unattended and always remain nearby when the hammock motor is running.
- Do not push the hammock motor manually while the hammock motor wire is attached to the hammock.
- For safety and warranty, the product may not be rebuilt or modified in any way.
- Use the original power plug only. Uncertified or non - original power plugs may cause electric shock, fire, explosion and other hazards.
- Please do not use any power source other than the 9V power adapter supplied by the factory.
- Risk of electric shock. Hands should be dry and clean before touching the power supply, plug and cable. Do not bend, twist or step on cables to avoid breakage, especially at the input and output ends of the cable.

Maintenance

- Do not spray or clean the surface with corrosive liquids. For dust cleaning, please wipe gently with a soft cloth with clean water.
- his hammock motor is not waterproof, it cannot be washed with water or placed in a humid or rainy place.
- Please keep the hammock motor and its accessories away from the reach of children to avoid injury.
- Do not expose the hammock motor and its accessories to sunlight to avoid accidents such as overheating, burning, and explosion.
- Do not place the hammock motor and its accessories in high temperature environments or within high - pressure equipment, such as microwave ovens or ovens. Otherwise, it may cause damage, fire or other accidents.
- Prying the case of the hammock motor with tools will damage or scratch it.
- Only use the hammock motor indoors.

Disposal

The product is subject to European Directive 96/2002/EC;



Never dispose the product with other household waste. Make sure you know the local regulations for separate collection of electronic products.

