

bamocks slyngevugge i økologisk bomuld

BRUGERMANUAL


STORT TILLYKKE MED KØBET AF EN BAMOCKS SLYNGEVUGGE.

Vi er glade for at I vil støtte det bæredygtige ved køb af vores bamocks slyngevugge, som er designet og testet i Danmark.


Stykliste



Slyngevugge i GOTS certificeret økologisk bomuld



Madras med 100% kapokfyld og økologisk bomuldsbetræk



Fjeder med sikkerhedsstrop og økologisk bomuldspose Fjederen indeholder nylonbelægning for at undgå metalstøv



Tote bag i økologisk bomuld



FSC og PEFC certificeret tværpind i bøgetræ



Delta karabinhage i rustfrit stål med kraftigt gummibelægning for at undgå metalstøv.

Samlingsvejledning

01 Ophæng, såsom krog, karmbeslag eller stativ skal først monteres og ophænges. Hvis en vuggemotor anvendes, skal den opsættes inden slyngevuggen samles.

02 Fjederen skal betrækkes med bomuldsposen. Sløjferne på begge ender af bomuldsposen skal strammes, så den sidder fast på fjederen. Alternativt kan du vente til at slyngevuggen er opsat, så den også betrækker karabinhagen.

03 Hæng fjederen på ophænget. Vær forsigtig med opsætningen af fjederen på ophænget, hvis det er en karabinhage med en skarp kant, da karabinhagens skarpe kant kan beskadige gummibelægningen.



04 Montér tværpinden i midten af siderne på slyngevuggen. På højre - og venstreside af slyngevuggen er der indikatorer i form af stropper. Tværpinden skal monteres under stropperne. Herefter sørger I for at binde stropperne stramt rundt om tværpinden, så de danner en lille sløffe.

05 Karabinhagen skal nu monteres på slyngevuggen. På slyngevuggens øverste midtpunkt er der et "loop", der indikerer slyngevuggens midterpunkt. Du må IKKE hænge karabinhagen på selve loopet.

06 Karabinhagen skal nu sammen med slyngevuggen monteres på fjederen. Karabinhagen skal skrues løs, så den monteres på fjederen. Sørg for at skruer karabinhagen fast igen.

07 Madrassen skal nu indsættes i slyngevuggen. Dette kan også gøres inden step 1.

08 Slyngevuggen er nu klar til brug.

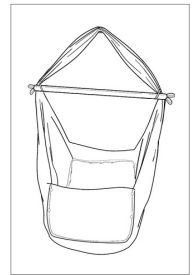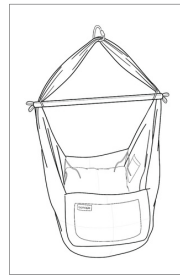

Stadig i tvivl, så scan denne video guide om montering af slyngevuggen

Babyens placering i slyngevuggen

Babyen skal ligge i midten af slyngevuggen, således at hovedet er en smule hævet i forhold til fodenden. Barnets hoved skal være placeret i den ende, hvor den udvendige forlomme er. Det vil sige, at fodenden er, hvor de 4 knapper er.

Sikkerhedsvejledning



- Benyt ikke slyngevuggen, når din baby kan sidde, knæle eller trække sig op
- Hold altid opsyn med dit barn i slyngevuggen
- Små børn må ikke lege i nærheden af slyngevuggen
- Babyen må udelukkede sove på ryggen i slyngevuggen
- Babyens vægt må ikke overstige 15 kg., når slyngevuggen anvendes
- Fjederen er en sliddele som skal kontrolleres. Brug ikke samme fjeder til barn nr. 2
- Benyt ikke slyngevuggen, hvis der er tegn på skader eller slitage
- Tværpinden skal monteres, så slyngevuggen er i vatter.
- Slyngevuggen skal være i vatter.
- Vær opmærksom på, at der kan opstå brandfare ved anvendelse af cigaretter eller anden form for åben ild eller andre kilder der kan udvikle varme (elektriske produkter, gas, mv.)
- Montering af slyngevuggen må kun ske ved brug af bamocks originale dele og må ikke erstattes af uoriginale dele
-
- Vær forsigtig med opsætningen af fjederen på en karabinhage med en skarp kant. Den skarpe kant på karabinhagen kan beskadige gummibelægningen.
- Tjek at sikkerhedstropperne på begge ender af tværpinden sidder fast ved brug af slyngevuggen hver gang. Du må ikke kunne "vælte" tværpinden ved at presse tværpinden nedad
- Alle dele skal spændes ordentligt og omhyggeligt. Vær opmærksom på alle løse komponenter som kan fange dele af kroppen eller tøj og dermed potentielt kan medføre risiko for kvælning (knapper, snore mv.)
- Slyngevuggen er ikke noget legetøj. Derfor må man ikke bruge den som en gynge. Vær især opmærksom på dette, når børn eller andre uden erfaringer med slyngevuggen er i nærheden af slyngevuggen.
- Slyngevuggen må aldrig have kontakt med gulvet. Sørg for at der er minimum 5 cm fra gulvet til bunden af slyngevuggen når fjederen strækkes i fuld længde.
- Tjek at gummibelægningen ikke er slidt. I tilfælde af slitage anbefales brug af krympeflex, da gummibelægningen er en sliddele og vil med tiden blive slidt

Rengøring og vedligeholdelse

Vores slyngevugger er lavet i økologisk bomuld og vi anbefaler kun vask ved max 30 grader C. Vi fraråder dog generelt at vaske slyngevuggen. Er der kommet pletter på, anbefaler vi at det fjernes ved brug af et fugtigt viskestykke. I tilfælde af maskinvask, anbefaler vi at bagenden og forenden stryges efterfølgende, så det får sin lækre form igen.

Selvom kapok godt kan tåle vask, så anbefaler vi ikke at madrassen vaskes. Sørg for at lufte kapokmadrassen hver 14. dag. Vi anbefaler i stedet køb af vores betræk til madrassen, da den er lavet af økologisk bomuld og kan tåle maskinvask.



Bamocks Baby Hammock in Organic Cotton

USER MANUAL


CONGRATULATIONS ON YOUR NEW BAMOCKS BABY HAMMOCK.

We are happy that you want to support a sustainable choice by buying a hammock from Bamocks. Our baby hammock is designed and tested in Denmark.

Package list



Hammock with GOTS certified organic cotton.



Mattress with kapok filling and organic cotton fabric.



Spring with safety strap and organic cotton cover. The spring has nylon coating.



Tote bag in organic cotton.



FSC and PEFC certified spreader bar in beech.



Stainless steel triangle carabiner with rubber coating.

Installation guide

01 Hooks, such as the door clamp, stand or ceiling hooks must be mounted first. If a baby hammock motor is to be used, then it must be assembled first.

02 The spring must now be covered with the spring cover. Make sure to tighten both ends with the straps.

03 Hang the spring on your hook. Be careful when mounting the spring on the hook, if it is a carabiner with a sharp edge, as the sharp edge of the carabiner can damage the rubber coating.

04 The spreader bar must now be mounted on the right and left side of the baby hammock. On the left and right side there are indicators that will help you to choose the correct place to mount the spreader bar. Fix the spreader bar below the indicators and tighten the strap around the spreader bar so the spreader bar is fixed.

05

Mount the triangle carabiner on the baby hammock. On top of the hammock there is a loop to indicate where the triangle carabiner should hang. Make sure to screw the carabiner on again. Do not hang the carabiner on the loop.



06

07 The carabiner must now be mounted on the spring together with the hammock. The carabiner must be unscrewed so that it is mounted on the spring. Make sure to screw the carabiner back to its place again.

08

The mattress shall now be placed inside the baby hammock. This can also be done before Step 1.

The baby hammock is now ready for use. Make sure the baby hammock is horizontal. If it isn't then fix the spreader bar by untying the straps and correct the spreader bar. Make sure to tighten the straps again.

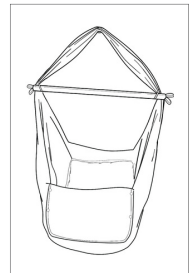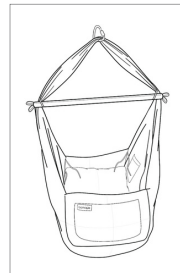

Still in doubt? Scan and watch this video guide on how to mount the baby hammock

The baby's location in the baby hammock

1. The baby should lie in the center of the baby hammock so that the head is slightly raised relative to the foot end.
2. The baby's head should be located at the end where the outer front pocket is. The baby's feet should be at the end where the 4 buttons are located.

Safety instructions



- Do not use the baby hammock if the baby can sit up, kneel or pull themselves up.
- Always supervise the baby in the baby hammock.
- Small children must not play near the baby hammock.
- The baby must only sleep on its back in the baby hammock. • The baby's weight must not exceed 15 kg when using the baby hammock.
- The spring is a part that can wear over time. Always make sure that the spring is not damaged. Do not use the same spring for your next child.
- Do not use the baby hammock if there are signs of damage.
- The spreader bar must be mounted so that the hammock is level.
- Be aware that there is a risk of fire when using cigarettes close to the baby hammock and if the baby hammock is close to an open fire or other sources where heat may develop (gas heat, electrical products etc.).
- Only use the hammock with original bamocks parts. Do not replace with other parts.
- Check that the rubber coating on the spring is not worn.
- Be careful when mounting the spring on a carabiner with a sharp edge. The sharp edge of the carabiner can damage the rubber coating.
- Check that the safety straps on both ends of the spreader bar are secure every time you use the baby hammock. You must not be able to "overturn" the spreader bar by pressing the spreader bar downwards.
- All parts must be tightened properly and carefully. Be aware of any loose components that can catch parts of the body or clothing and thus potentially lead to the risk of suffocation (buttons, cords, etc.).
- The baby hammock is not a toy. Therefore, it should not be used as a swing. Pay special attention to this when children or others with no experience with baby hammocks are near the hammock.
- The baby hammock must never be in contact with the floor. Make sure there is a minimum of 5 cm from the floor to the bottom of the baby hammock when the spring is stretched to full length.

Cleaning and Maintenance

Our baby hammocks are made in organic cotton and we therefore recommend washing at a maximum of 30 degrees Celsius. However, we generally do not advise washing the baby hammock. If stains have appeared, we recommend using a moist cloth to remove them. In case of machine washing, we recommend that the front and back ends are ironed afterwards.

Although kapok can withstand washing well, we do not recommend washing the mattress. Be sure to ventilate the kapok mattress every 14 days. We recommend instead buying our cover for the mattress, as it is made of organic cotton and can withstand machine washing.

